

DuraRoll Technical Information





DuraRoll Standard & DuraRoll Mini

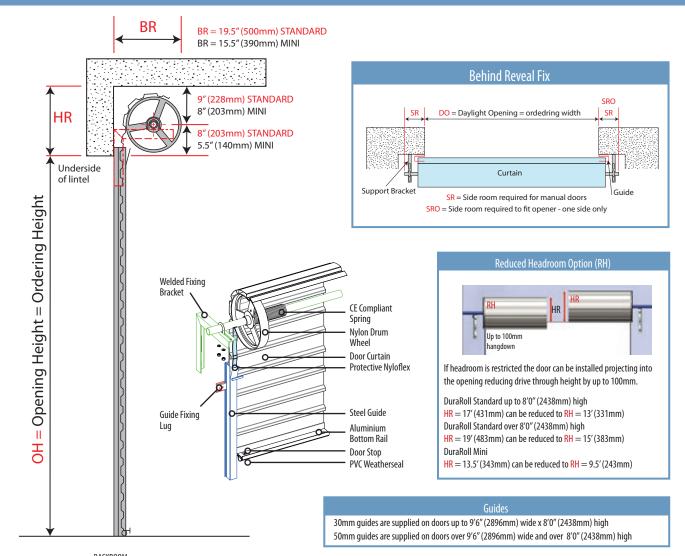



Stand	Standard DuraRoll - standard brackets 30mm guides			
HEADROOM	SIDEROOM	SIDEROOM	BACKROOM	
	WITHOUT OPENER	WITH OPENER		
HR	SR	SRO	BR	
17" (431mm)	3.75" (95mm)	5" (125mm)	19.5" (495mm)	

On doors 8'-10' high a minimum of 19" (483mm) headroom is required. Doors with 50mm guides require an additional 20mm sideroom.

Standard DuraRoll - notched brackets 30mm guides				
HEADROOM	SIDEROOM WITHOUT OPENER	SIDEROOM WITH OPENER	BACKROOM	
HR	SR	SRO	BR	
17" (431mm)	3.00" (76mm)	5" (125mm)	19.5" (495mm)	
On doors 8'-10' h	igh a minimum of 19" (4	83mm) headroom is	required	

Doors with 50mm guides require an additional 20mm sideroom

Doors with 50mm guides require an additional 20mm sideroom.

HEADROOM (FULL OPENING) 13.5" (343mm) Doors with 50mm guides require an additional 20mm sideroom.

BACKROOM

Mini DuraRoll - standard brackets 30mm guides				
HEADROOM	SIDEROOM WITHOUT OPENER	SIDEROOM WITH OPENER	BACKROOM	
HR	SR	SRO	BR	
13.5" (343mm)	3.75" (95mm)	6.75" (170mm)	15" (381mm)	
DuraRoll Mini Roll	er is available up to 10'	x 7' (3048 x 2134mn	n).	

Mini DuraRoll - notched brackets 30mm guides				
HEADROOM	SIDEROOM WITHOUT OPENER	SIDEROOM WITH OPENER	BACKROOM	
HR	SR	SRO	BR	
13.5" (343mm)	3.00" (76mm)	6.75" (170mm)	15" (381mm)	

Floor rebate

To help assist water draining away effectively from the door and prevent water ingress you must have a rebate. If your floor is not rebated and not sloping away from the door you will be susceptible to water ingress as water will not be able to drain away effectively.

- 10mm minimum high rebate behind the door threshold or where your door seal meets a level floor.
- It must run 130mm past the opening to accommodate the guides
- It must run 130mm into the opening to accommodate the guides.

